

 
On Board Conference Chairs

Adjustment Instructions

form

FURNITURE MADE SIMPLE®

1 SLIDE SEAT

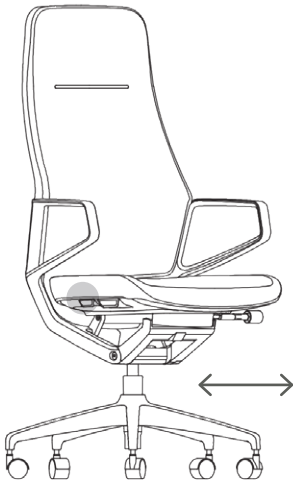


Control located on the right side under the seat toward the back.

Pull out function key to slide seat forward or back.

Adjust sliding seat so that hips and knees are at a 90-degree angle to reduce fatigue.

2 ADJUST HEIGHT

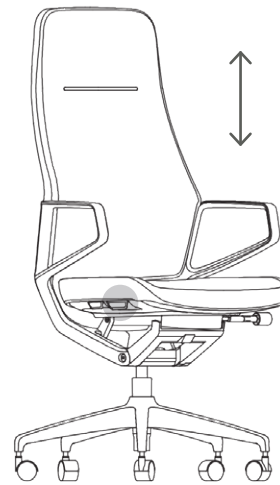


The control is located on the right side under the seat toward the front.

To lower seat, sit in the chair and engage the lever. When desired height is reached, release the lever.

To raise the seat, shift your weight to your feet and engage the lever. The chair will rise automatically.

4 TILT LOCK

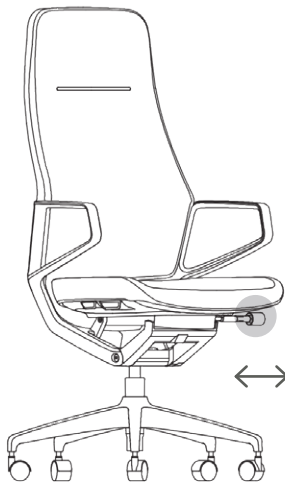


Control located on the left side under the seat.

Pull out the control to unlock the tilt function and adjust.

Relock control by pushing in when desired angle is reached.

3 TILT TENSION

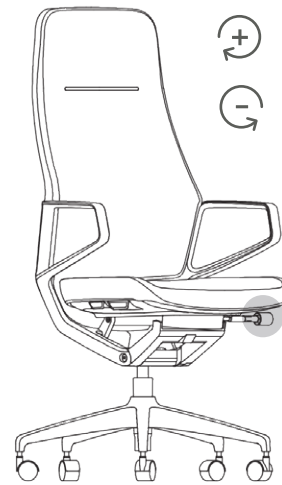

Control located on the left side under the seat.

Rotate control outward to increase tension.

Rotate control inward to release tension.

This controls the tension and angle of the seat back.

formfurniture

www.form-furniture.com

Form Furniture ©2023 All Rights Reserved.

